

# POWERFLEX®

## PART NUMBER

**PFF12-106/12-1106**

## DESCRIPTION

**FRONT WISHBONE REAR BUSH**

## INSTALLATION GUIDE

### Contents (parts per pack):

2 x Polyurethane Bushes      1 x PTFE/Silicone Grease  
2 x Zinc Plated Mild Steel Brackets      4 x M10 Bolts  
8 x M10 Zinc Plated Washers      4 x M10 Nylock Nuts

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original rubber bush from the front wishbone.
2. Clean any dirt and corrosion from the front wishbone, and file off any sharp edges.
3. Insert the polyurethane part into the bore of the zinc plated bracket until the top hat sections sits in contact with the surface of the bracket.
4. Apply some of the supplied grease to the bore of the polyurethane part and push the part and bracket onto the front wishbone with the top hat section first, and so that the bolt holes in the bracket line up with the bolt holes in the car.
5. When refitting the bracket to the car, place a washer under the bolt head and inside of the nylock nut, and tension all hardware to manufacturers recommended torque settings.

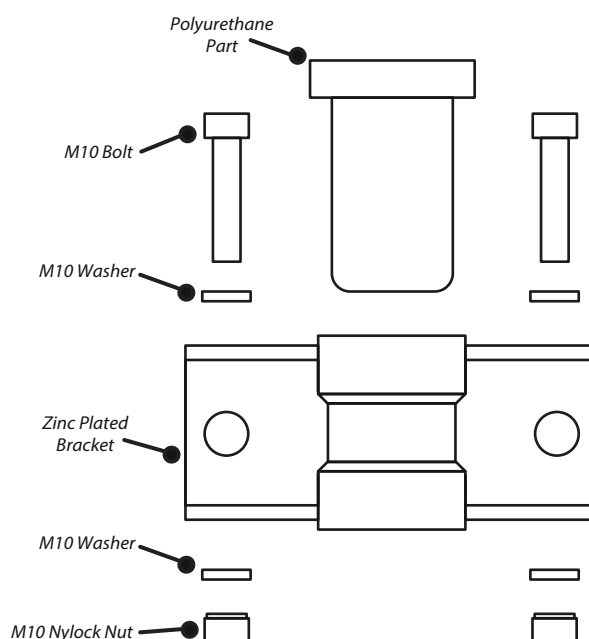


Figure 1