

# POWERFLEX®

## PART NUMBER

# PFF85-203

## DESCRIPTION

## FRONT LOWER WISHBONE REAR BUSH

## INSTALLATION GUIDE

### Contents (parts per pack):

- 2 x Polyurethane Bushes
- 2 x Stainless Steel Sleeves
- 2 x Thin Steel Clip Sleeves
- 2 x PTFE / Silicone Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.


It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



### Fitting Instructions:

1. Remove the original bush from the wishbone, clean any dirt and corrosion from the bore of the wishbone, and file off any sharp edges.
2. Push the polyurethane bush into the bore of the wishbone with the smallest end fitting through the radius of the arm first. It may be necessary to apply some washing up liquid to the outside of the bush to ease fitting.
3. Apply some of the supplied grease to the bore of the bush and push the stainless steel sleeve into the bore so it sits flush inside the bush.
3. The kit includes a thin steel sleeve, this needs to be fitted into the Powerflex bush after the arm is fitted onto the car but before the mounting bolt is re-fitted.
3. Tension all hardware to manufacturers recommended settings.

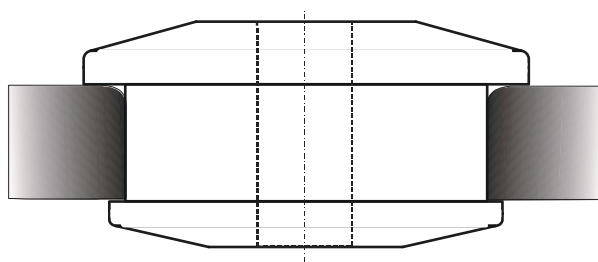

Ensure large diameter of polyurethane bush is located to towards the side of the arm with a radius.

Figure 1